



| | | | | |
|----------------|-------------------|-------------------|-------------------|-------------------|
| G (x1) 10mm | M-A (x4) M4x14 | M-B (x4) M5x14 | M-C (x4) M6x14 | M-D (x4) M8x20 |
| F (x3) M6 | H (x1) 4mm | M-E (x4) D5 | M-F (x4) D8 | M-G (x8) |

1 Feed both ratchet straps through the slots

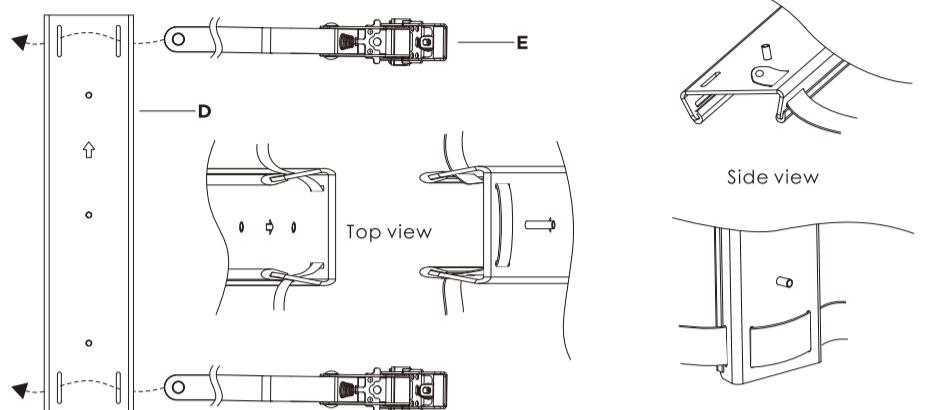


7 INSTALL THE TV MOUNT

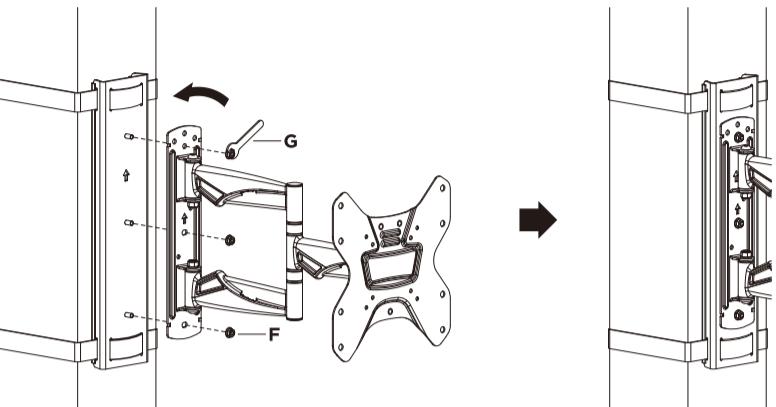


2

TWO PEOPLE ARE REQUIRED TO MOUNT THIS BRACKET

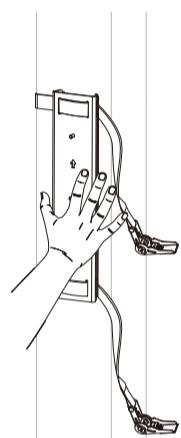


Hold column mounting bracket to the column where you would like to mount the TV.

3

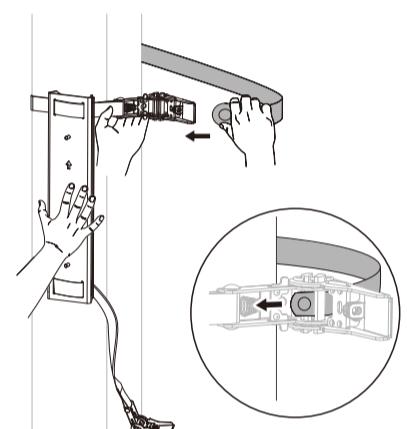

Ask a second person to wrap the strap around the column. Person #2 should insert free end of strap into the slot of the ratchet buckle.

8

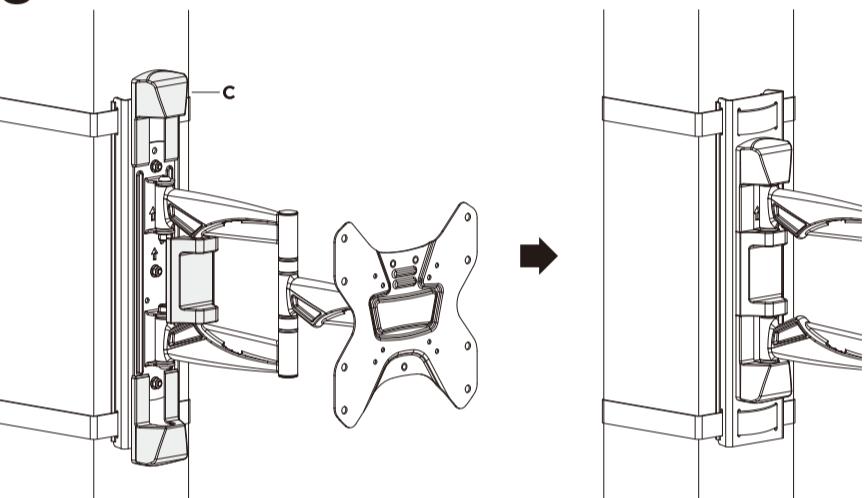


4

4a. Bring the ratchet buckle snug to the column and pull the strap tight.


4b. Crank the handle to tighten the strap until it feels taut and secure.

4c. Close the buckle to lock it.

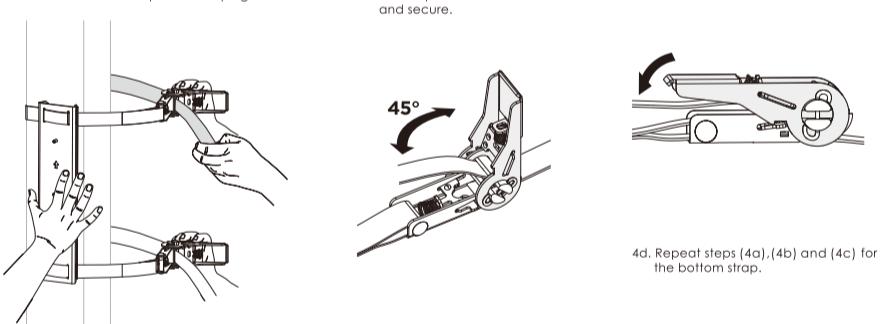


4d. Repeat steps (4a), (4b) and (4c) for the bottom strap.

9

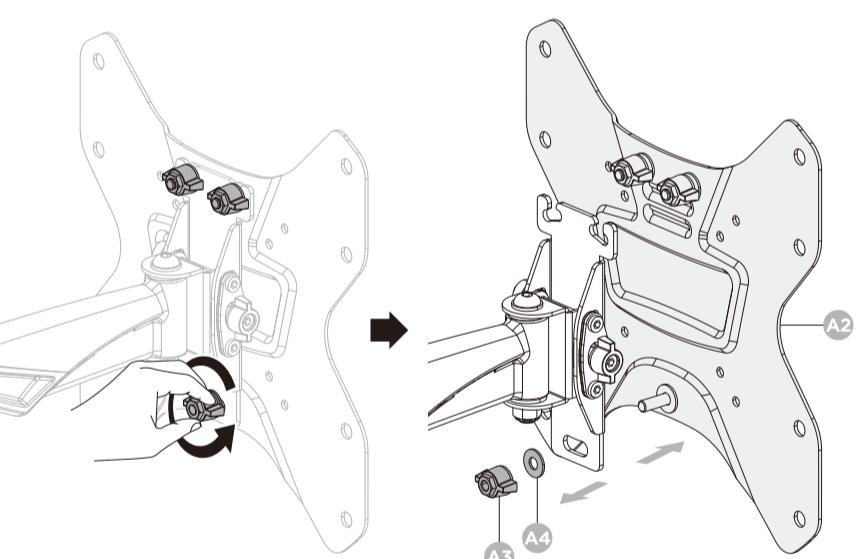


5

Cut extra strap or fold and tuck away.

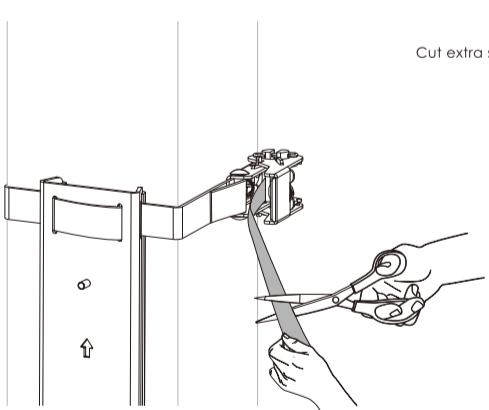

10



X Too Long X Too Short

6

